How to install wardrobe doors



Below is a step-by-step guide of how to install sliding wardrobe doors. We are confident that anyone with basic DIY skills will be able to complete the whole process with ease.

Step 1: Installing top and bottom tracks

Use your spirit level to make sure the floor is level before laying the bottom track on the floor. Pack up one end of the track if your floor isnt level. You can attach the bottom track using screws or silicone.

To install the top track you will need someone else to help you hold the track. Position the top track against bulkhead / ceiling and screw into place.

You will be provided with a top and bottom track that includes end caps. These tracks are cut slightly under size, the end caps are positioned at each end of the tracks and can be moved to sit flush against the jamb/wall.


Please ensure your bottom track is facing the correct way (see diagram).



Step 2: Installing the wardrobe doors

Place the rear door into the opening by sliding it into the top track first.

Carefully lower the bottom wheels into the floor track grooves. Repeat this process for the remaining doors. Finally, test the doors to see if they close securely.

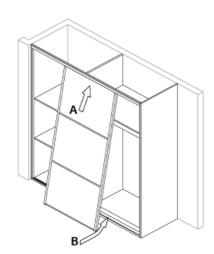

How to adjust the door:

To adjust the door for alignment with the door jamb Use a philips head screw driver and turn the screw located at the top of each wheel at the back of door.