


How to measure shelving



Accurate measurements are important to ensure your shelving fits correctly. Depending on which shelving package you select determines what measurements you need to provide us.

Standard opening package requires the most amount of measurements from you.

These measurements include the internal width, depth and width of left and right returns of the wardrobe. The internal width is what the top shelf will be cut at. We require the depth to ensure our 445mm shelving will fit. We require the return widths to make sure there is no obstruction of opening drawers if included in package.

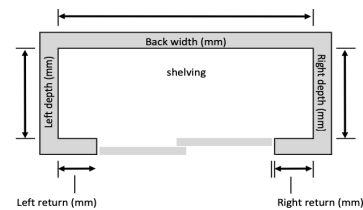


Straight wall opening package requires only one measurement from you.

We need to know what the width of your wardrobe will be, this is what the top shelf will be cut at. This package includes 2 end panels which will act as the sides of your wardrobe.

These end panels are 2700mm x 595mm x 16mm which you can cut

to the height of your ceiling or bulkhead. Bulkhead is not included to this package

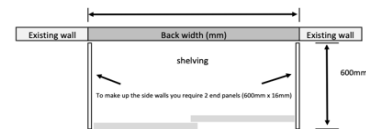

Corner opening (right) package requires only one measurement from you.


You need to measure from the existing wall on your left to where you want the wardrobe to end on your right.

The top shelf will be cut at this length. The package includes

1 end panel which will act as the right hand side of your

wardrobe. This end panel is 2700mm x 595mm x 16mm and can

be cut to the height of your ceiling or bulkhead. Bulkhead is not included to this package

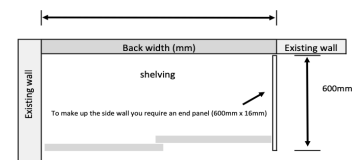

Corner opening (left) package requires only one measurement from you.

You need to measure from the existing wall on your

right to where you want the wardrobe to end on your left.

The top shelf will be cut at this length. The package includes

1 end panel which will act as the left hand side of your

wardrobe. This end panel is 2700mm x 595mm x 16mm and can

be cut to the height of your ceiling or bulkhead. Bulkhead is not included to this package

